




## UV TOWEL WARMER USER MANUAL

---

For  
KDA-TWAPP-08  
KDA-TWAPP-20  
KDA-TWAPP-45

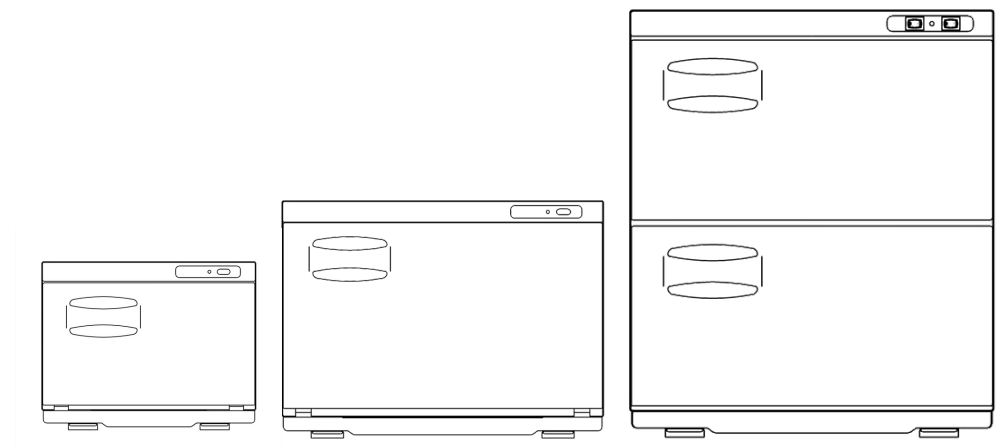

AYC Group LLC

☎ 972-926-6488

✉ [service@aycllc.com](mailto:service@aycllc.com)

🌐 [www.aycllc.com](http://www.aycllc.com)



**Thank you for purchasing our Dermalogic UV Towel Warmer.**

**To use this product safely and correctly, please read this manual carefully and abide by all the directions and notes.**

## TECHNICAL INFORMATION

Model	Dimension (inch)			Volt (V)	Frequency (Hz)	Power (W)		Temperatures (°F)	Capacity (L)	Weight (lbs)
	L	W	H			Heating	UV			
KDA-TWAPP-08	13	11	10.2	120	60	150	3	165 ± 10	8	11
KDA-TWAPP-20	17.7	11.2	13	120	60	250	3	165 ± 10	20	17.6
KDA-TWAPP-45	17.7	12.2	23.4	120	60	250x2	3x2	165 ± 10	40	30.8

## CAUTIONS

1. Do not leave equipment unattended when plugged in.
2. Close attention is necessary when used near children.
3. Use only as described in this manual.
4. Do not use this with a damaged cord or plug.
5. The power socket used should meet the safety requirement for electricity and in accordance with the operation requirement on the label.
6. Do not carry by the cord, keep the cord away from heated surfaces.
7. To unplug, grasp the plug, not the cord.
8. Do not handle plug or equipment with wet hands.
9. Turn off all controls before unplugging.
10. It is prohibited to use outdoors, in high temperature or with poor ventilation.
11. It is prohibited to use in the rain, or a moist place. Do not immerse in water.
12. CAUTION: To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
13. WARNING: Eye damage may result from directly viewing the light produced by the lamp in the warmer. Always turn off the lamp before opening the cover.
14. WARNING: This cover is provided with an interlock to reduce the risk of excessive ultraviolet radiation. Do not attempt to service without removing the cover completely.
15. Extension cords may be used if care is exercised in their use.  
If an extension cord is used:
  - a. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - b. If the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord; and
  - c. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally.

## OPERATION INSTRUCTIONS

1. Make sure that the machine is firmly situated before opening the door or turning on the power.
2. Only an appropriate power supply can be used. Insert the power plug into a power outlet.
3. Only clean and tidily rolled towels or tools placed on the rack can be put into the warmer.
4. Close the door after correctly following the procedures and turn on the cabinet.
5. Press the UV switch to turn on disinfection. If the blue indicator is on, the warmer is disinfecting.
6. Press the power switch to turn on heat. If the red indicator is on, the warmer is in auto warming mode at the temperature between 150-170°F (65-75°C).
7. The time required for a towel to reach the desired temperature may vary due to the different starting temperature of the towel.
8. The machine should be unplugged when not in use.
9. Store it in a dry place with good ventilation.
10. UV disinfection needs to be turned off manually to control the disinfection period. We suggest a period of 25 minutes or less.
11. Close the door when disinfecting. The door is equipped with a protection device to turn off the UV lamp in case the door is opened while sterilizing. The UV lamp would not start to work again until the door is firmly closed.
12. Only service technicians may disassemble the ultraviolet sterilizing cupboard. There is no part you can repair on your own.
13. Do not open the door of the cabinet during disinfection or warming, otherwise it may adversely affect the disinfection and warming effects. Use tongs to pick up the articles in the heated cabinet. Please do not use bare hands, it may cause secondary contamination and scalding.
14. Regularly check the water collector to remove accumulated water. Be sure to remove the power plug before cleaning.
15. In the case of a damaged power cord, it should be replaced with a specific cord obtained from the manufacturer or specified service department.
16. Any trouble product should be solved by professional electric serviceman or serviceman specified by the manufacturer.

## WARNING

The power plug of the ultraviolet sterilizing warmer is prohibited from inserting in to a socket without proper grounding device. The towels in the warmer must be clean. The warmers are not suitable for excessive storage to avoid spontaneous unusual smell or yellowing because of overheating. The towels should be cleaned, sterilized, and stored back in the cabinet for another use after storage in the cabinet of over 24 hours. The disinfection maintains cleanliness so the towels can be put in the cabinet to use once more.