


## About UV Light

Rotate to remove the UV light installed in the towel warmer and replace it when needed.

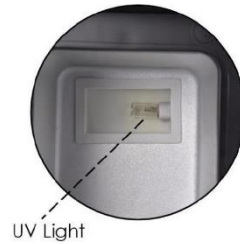

## Daily Maintenance



1. Take out the drainage tray to drain the wastewater regularly as shown (Fig. 1).
2. Use a wet cloth to clean the surface of the towel warmer.


## Troubleshooting Checklists

Issue(s)	Possible Cause(s)	Solution(s)
<b>The appliance could not be turned on.</b>	<ol style="list-style-type: none"> <li>1. Connection of machine and power cable are loosened.</li> <li>2. The fuse at the back has blown</li> </ol>	<ol style="list-style-type: none"> <li>1. Check the connection of the power cable and the towel warmer. Reconnect them to see if the problem could be solved.</li> <li>2. Replace the fuse.</li> </ol>
<b>The door could not be fully closed</b>	<ol style="list-style-type: none"> <li>1. The screw on the door hinge is loosened</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust the door position and retighten the screws</li> </ol>

dermalogic  
SALON APPLIANCES

## UV TOWEL WARMER MANUAL

ITEM: MSI-TWAPP-05

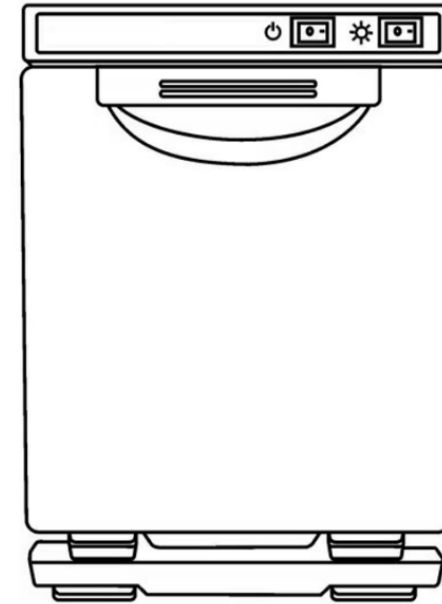

Thank you for purchasing our Dermalogic Towel Warmer. To use this product safely and correctly, please read this manual carefully and abide by all directions and notes.



## Safety Instructions

1. Make sure the appliance is plugged into a sufficient outlet.
2. Children are not allowed to operate this appliance for safety concerns.
3. Place the appliance on a flat, level, and solid surface.
4. If you want to sterilize wet towels, make sure that the wet towel is not dripping water. If it is dripping water, wring it first before putting it into the appliance.
5. Remember to regularly disconnect the power and clean the stagnant water inside the towel warmer
6. Take out the sterilized items from the appliance with tweezers, avoid using bare hands.
7. Never use any corrosive detergents to clean the appliance or its shelves.
8. DO NOT open or close the door with excessive force.
9. Keep the appliance away from explosive and flammable materials. Ensure that the distance between the appliance and the surrounding material is at least 30 cm.
10. For protecting your eyes, do NOT stare at the UV light tube directly when it is operational.
11. Always ensure the door of the appliance is closed when it's working.

## Specifications

<b>Overall Dimensions (LxWxH)</b>	8-7/16" x 10-3/8" x 11-11/16" (21.4 x 26.4 x 29.7 cm)
<b>Voltage</b>	110V, 60Hz
<b>Power</b>	200W
<b>UV Light Power</b>	3W
<b>Heating Temperature Range</b>	158F to 176F (70C to 80C)
<b>Type of UV Light</b>	E17
<b>Tank Capacity</b>	5L
<b>Net Weight</b>	7.7 Lbs (3.5 kg)

## Package Contents



Towel Warmer x 1




Shelf x 1



Power Cord x 1

## Operating Instructions

1. Confirm that the power switch is "OFF" and then firmly insert the plug to the socket.
2. Moisten towels before placing them in the towel warmer to be heated. Towels should be moist but not dripping wet.
3. Take the rack out of the warmer and fold or roll the moist towels neatly and then place them on the rack. Do not place too many towels; to prevent them from making direct contact with the warmer.
4. Close the door firmly and press the power button . The red indicator light will come on and the unit will begin to heat.
5. Press the UV button to start UV sterilizing. The red indicator light will come on and the UV light in the warmer will be on.
6. The heating and sterilizing function can work individually or simultaneously. Press both buttons to work simultaneously.
7. This unit has an auto-shutdown feature. When the temperature reaches its maximum, the power will automatically turn off. Once the temperature lowers again, the machine will power back on.